 
 


REGULAR CABLE

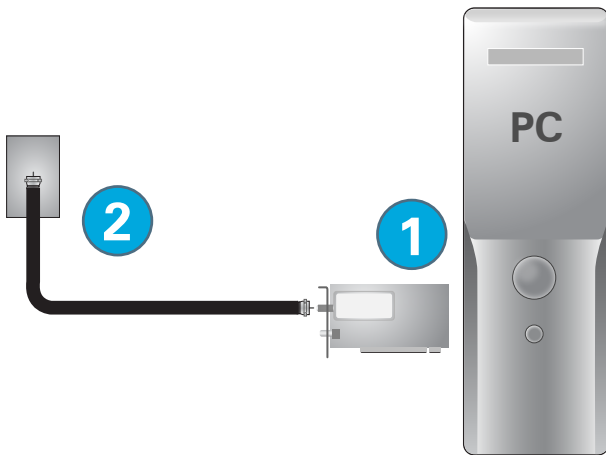

1 Choose and install an analog TV tuner

- TV tuners are available as PCI cards or USB external units:

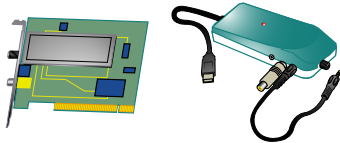

- For a complete list of supported TV tuner cards, see the Beyond TV system requirements. 

Note: SnapStream recommends using a TV tuner card with a hardware encoder.

Installing a card

- Follow the TV tuner manufacturer's directions for installing the TV tuner.
- In a typical installation, first install the TV tuner's drivers, and then install the TV tuner itself.
- Test whether the TV tuner is working by running the bundled software (that came with the TV tuner).

2 Connect the cable


- Connect the TV tuner with the cable outlet using a coaxial cable:



Note: Cable modem users can simply split the coaxial cable going into the cable modem and connect the extra source into the TV tuner.


3 Install and configure Beyond TV

- Install Beyond TV.
- Run the Beyond TV Setup Wizard. The setup wizard covers all setup options, including TV listings and SnapStream.Net account setup.

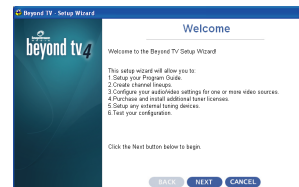

Beyond TV's Setup Wizard

Note: A SnapStream.Net account is required to schedule recordings from any web browser or WAP-enabled cell phone.

- See complete documentation of the Beyond TV Setup wizard in the Beyond TV help file. 

Enjoy watching and recording TV with Beyond TV!